


CLEG - Desking Leg - Silver Grey / White

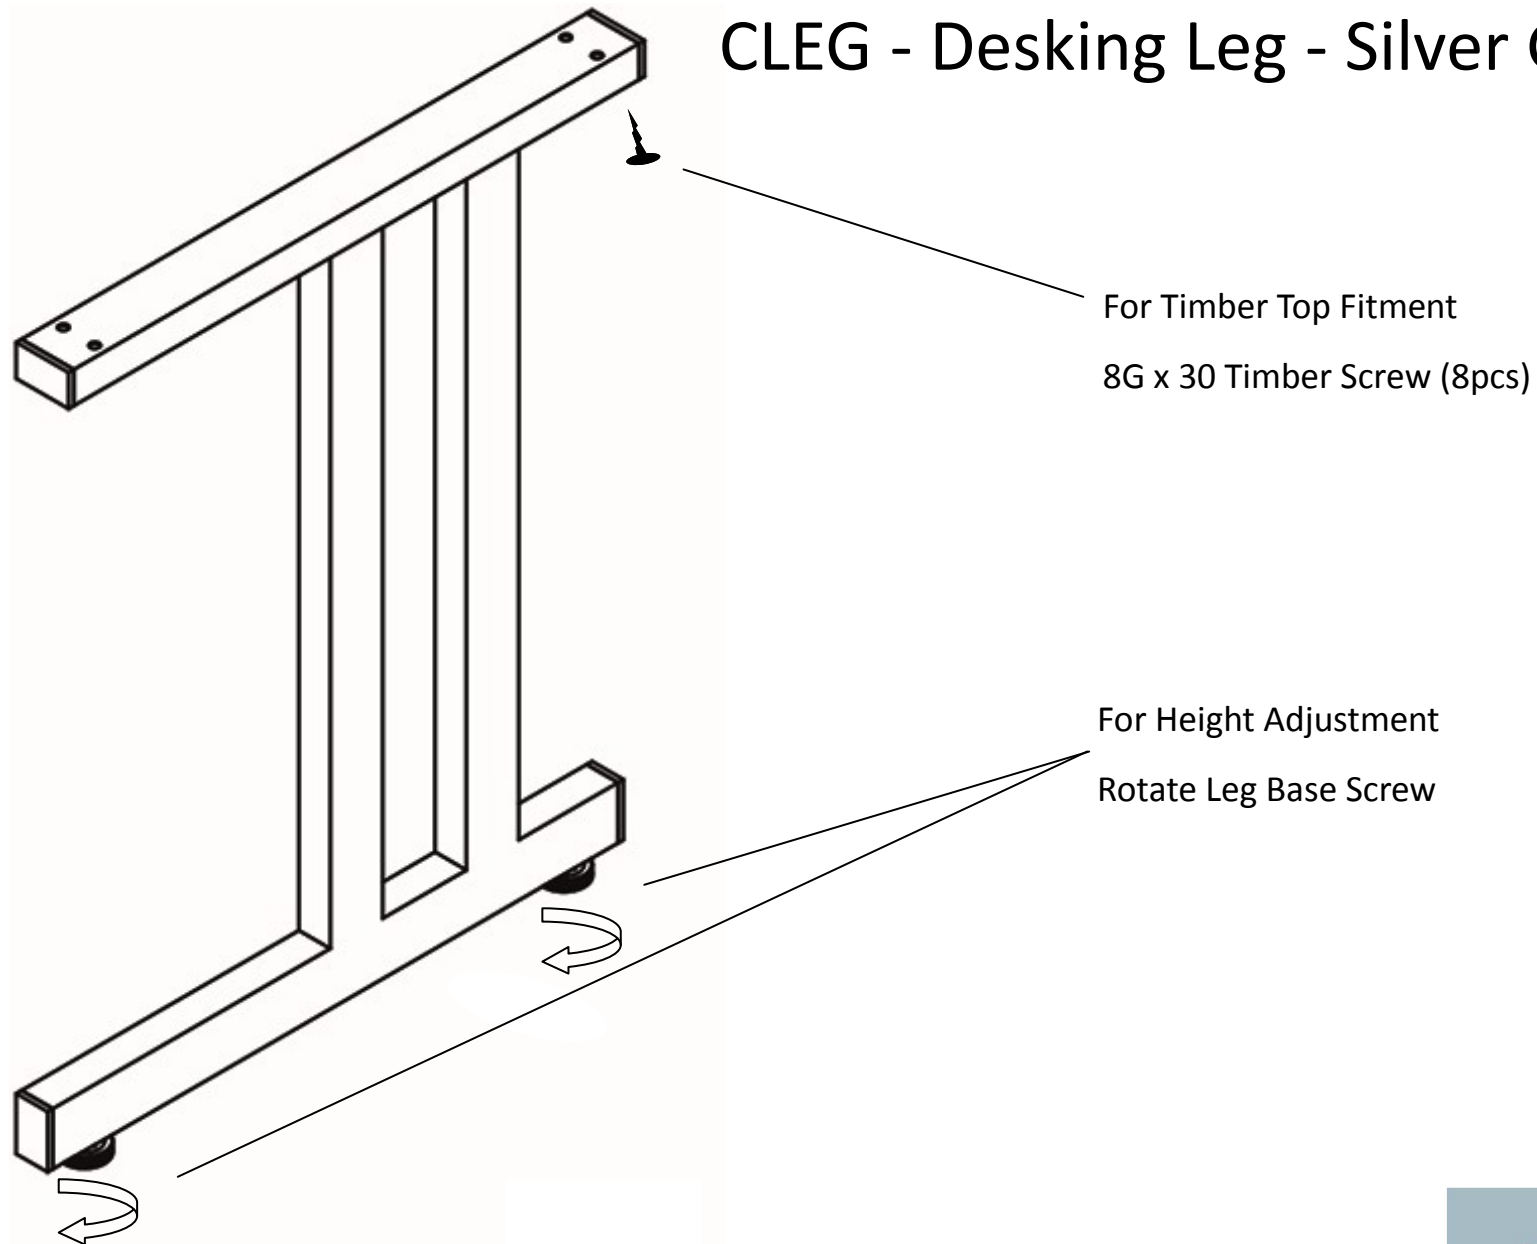


Rapid Span Straight Desk

Leg and Modesty Assembly and Timber Top Attachment Instructions


Step 1.

Attach Modesty Panels to legs and centre pole using screws provided

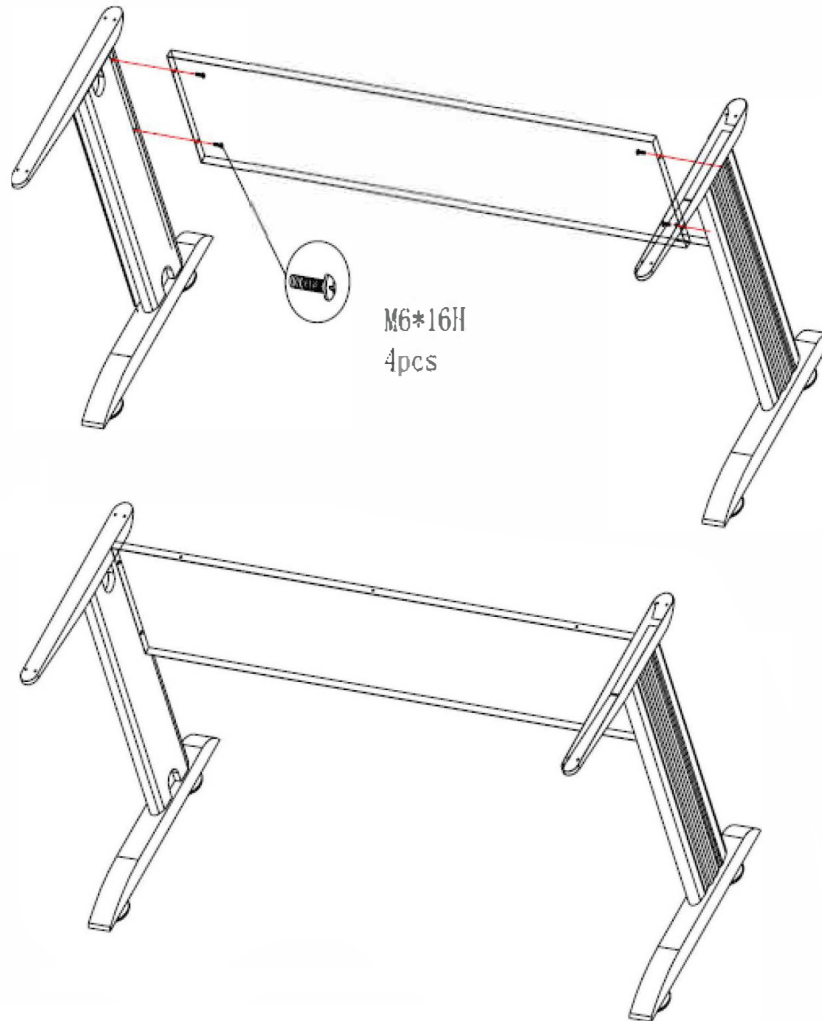

	M5*20H 3pcs		M6*16H 4pcs
	M5*30H 8pcs		

For Timber Top Fitment, First Centre Top And Ensure That The Correct Length Screw Is used

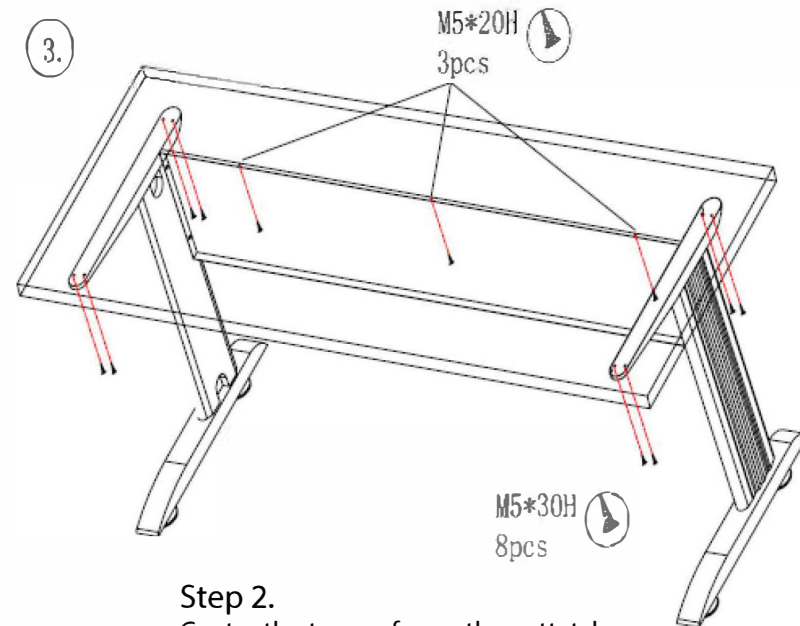

Step 2.

Centre the top on frame then attach top to frame using screws indicated.

Note: it may be easier to do this upside down with the top on a soft surface, and the frame centred upside down on the top.
Use a pencil to mark the screw locations and pre-drill holes first if necessary