



Assembly Instructions


MODEL NO: SP2FD-18

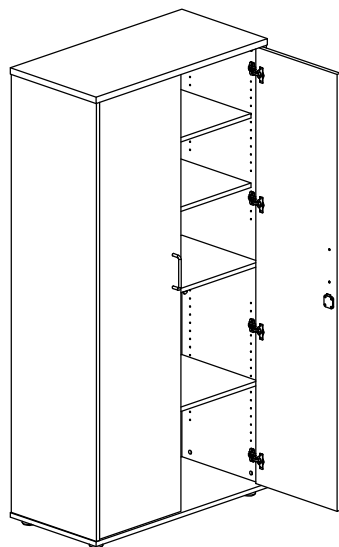

Pin 6x35 1 25PCS	Cam 2 25PCS
Cam Cover 3 25PCS	Shelf Pin 4 12PCS
Hinge(Inset) 5 8PCS	Handle AM-H08-128 6 2PCS
Wood Screw 4x16 7 50PCS	Handle Screw 4x25 8 4PCS
Lock Catcher 9 1PCS	ADJ. Feet ø42x25H 10 4PCS
Lock 11 1PCS	Wood Screw 3.5x13 12 18PCS
Wood Screw 4x20 13 4PCS	73x23x15 14 2PCS
ø6x40 15 2PCS	Wood Screw 4x40 16 2PCS

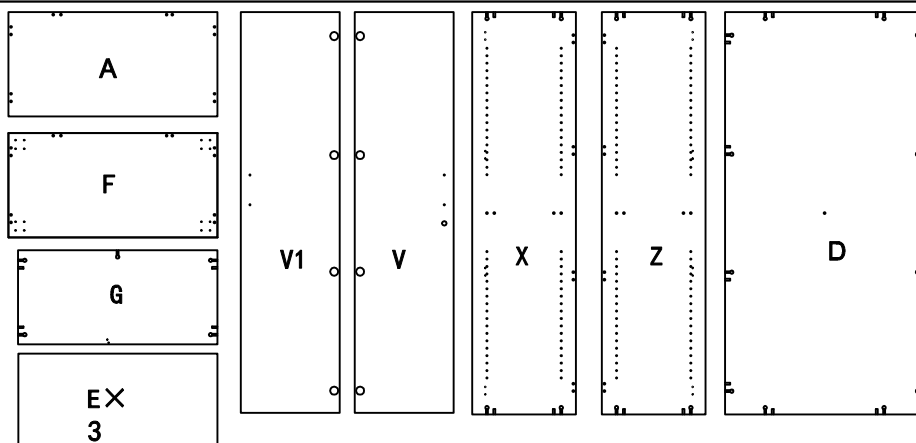


STEP1

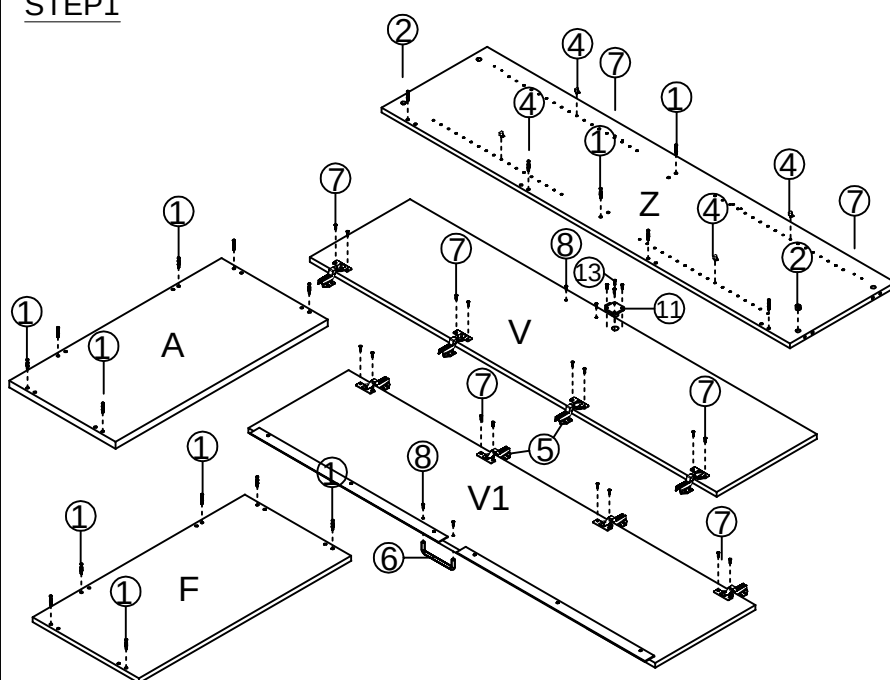


STEP2

First insert the pin(part#1), then place the cam(part#2), and finally tighten/lock off after they have been put into the melamine.

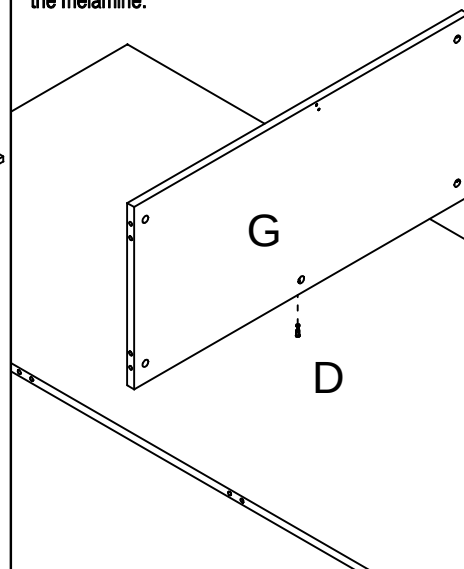

IMPORTANT NOTE:


- Place all laminated parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Don't tighten all screws/bolts until all completely assembled.
- Keep all hardware parts out of reach of children



Assembly Instructions


MODEL NO: SP2FD-18

STEP3

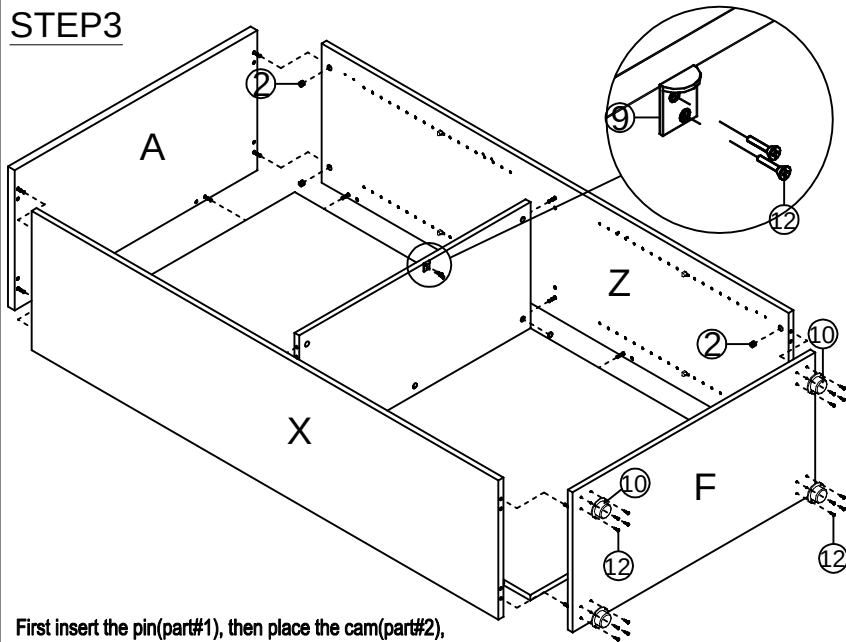


First insert the pin(part#1), then place the cam(part#2), and finally tighten/lock off after they have been put into the melamine.



STEP4

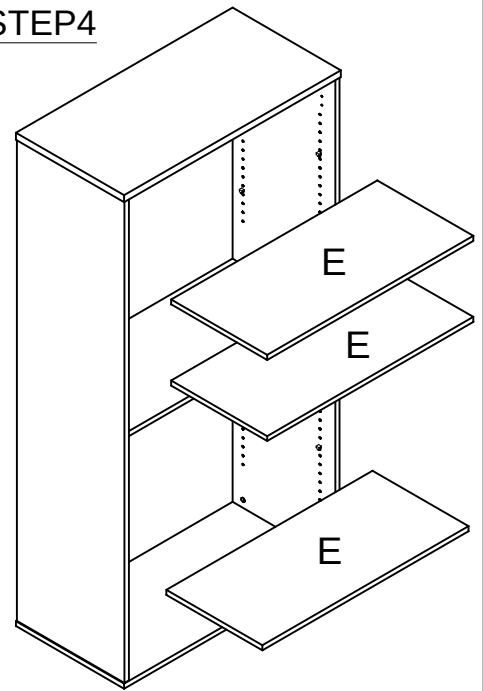


STEP5

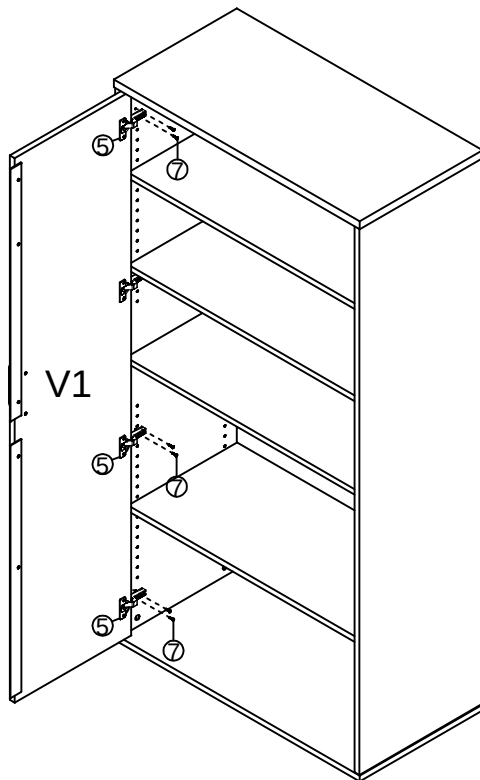


STEP6

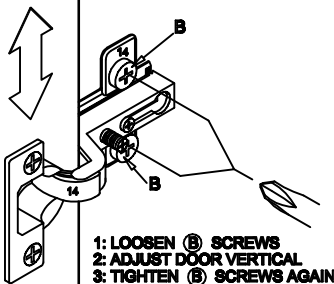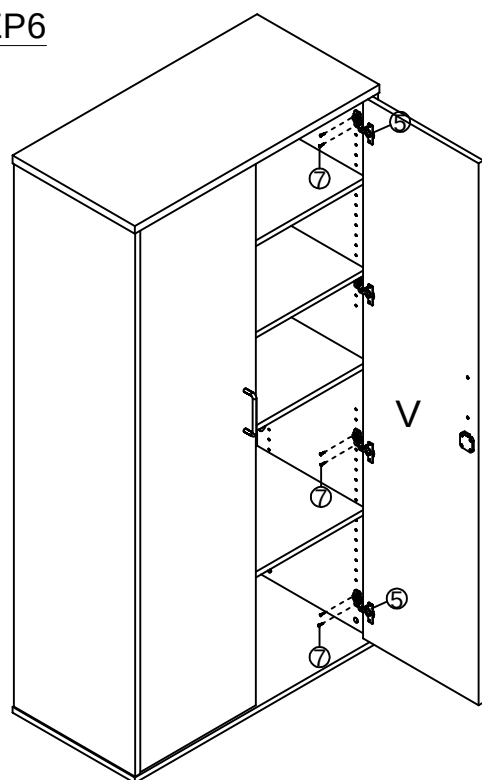

1: LOOSEN (B) SCREWS
2: ADJUST DOOR VERTICAL
3: TIGHTEN (B) SCREWS AGAIN

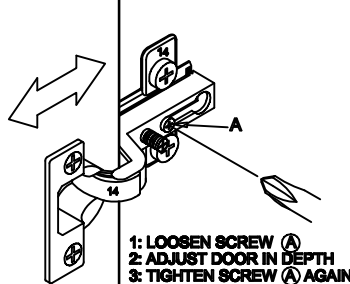

1: LOOSEN SCREW (A)
2: ADJUST DOOR IN DEPTH
3: TIGHTEN SCREW (A) AGAIN

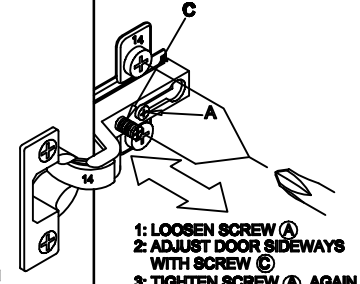

1: LOOSEN SCREW (A)
2: ADJUST DOOR SIDWAYS
WITH SCREW (C)
3: TIGHTEN SCREW (A) AGAIN

IMPORTANT NOTE:

Place all laminated parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
Check to be sure that you have all parts and hardware.
Remove all wrapping materials, including staples & packing straps before you start to assemble.
Don't tighten all screws/bolts until all completely assembled.
Keep all hardware parts out of reach of children



Assembly Instructions


MODEL NO:SP2FD-18

The warning sticker provided within this hardware kit **MUST** be attached to the piece furniture in a place that is 100% visible when the item is empty.

STEP7

Make a mark with a pencil

WALL

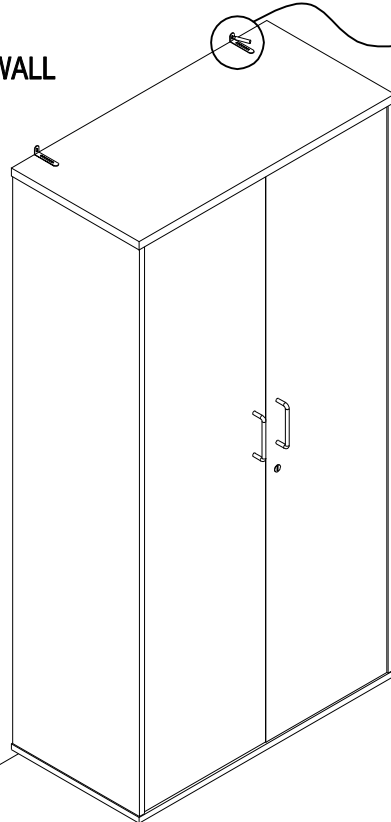


WALL

14

STEP8


WALL

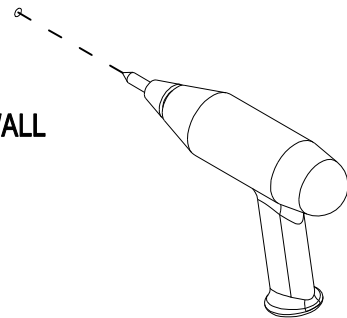

Drill holes at the marks with an electric drill


STEP9

WALL

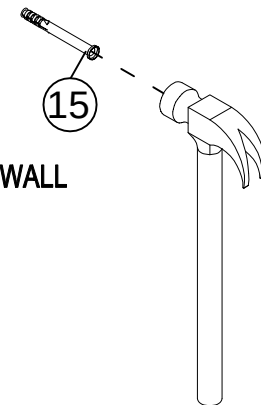


STEP10

WALL

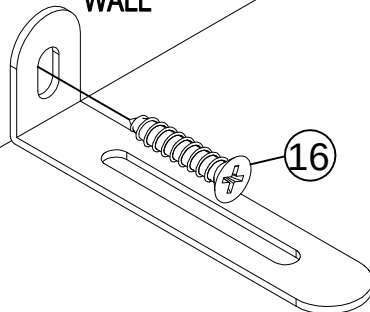

STEP11

WALL

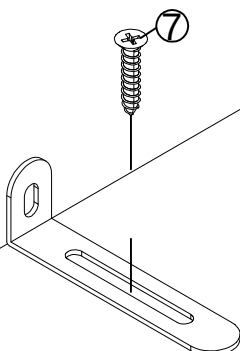

⚠ WARNING



Children have died from furniture tipover.

- ALWAYS secure it with an anchor device.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heavy items down low.

NEVER put a TV on this furniture



This furniture type is at high risk of toppling over

Ask staff for more information or visit <https://www.productsafety.gov.au>

IMPORTANT NOTE:

- Place all laminated parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Don't tighten all screws/bolts until all completely assembled.
- Keep all hardware parts out of reach of children

