


Assembly Instructions

MODEL NO:OHBR15

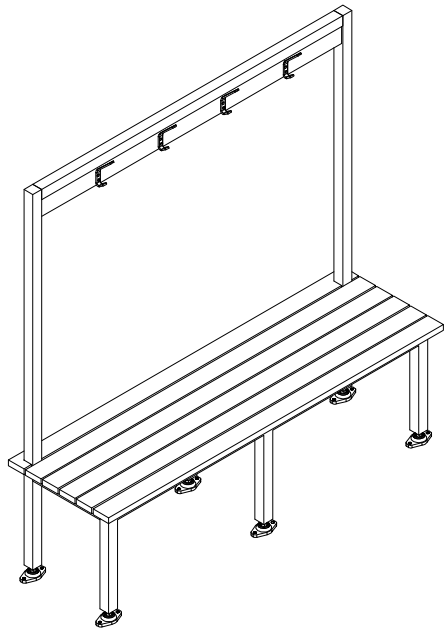


EFIFURNITURE




A

Bolt Screw 8×16 1 24PCS	Wood Screw 4×20 4 8PCS	7 4PCS
Bolt Screw 6×12 2 21PCS	Allen Wrench M5 5 1PCS	
Bolt Screw 6×50 3 8PCS	6 12PCS	


STEP1

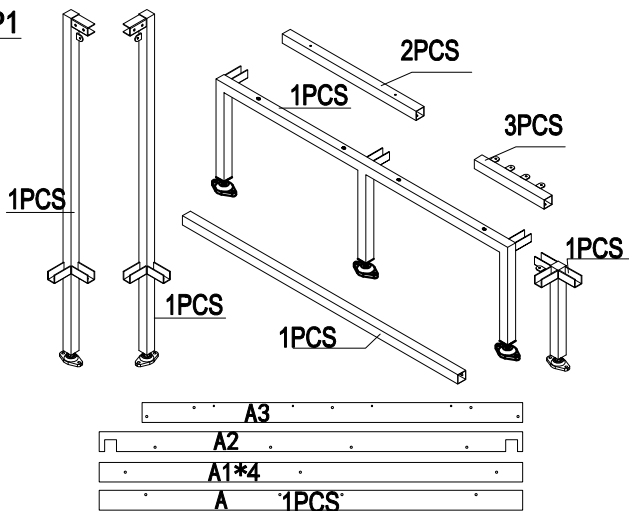


STEP2

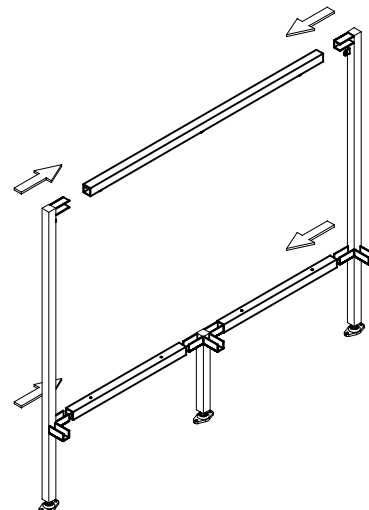

STEP3

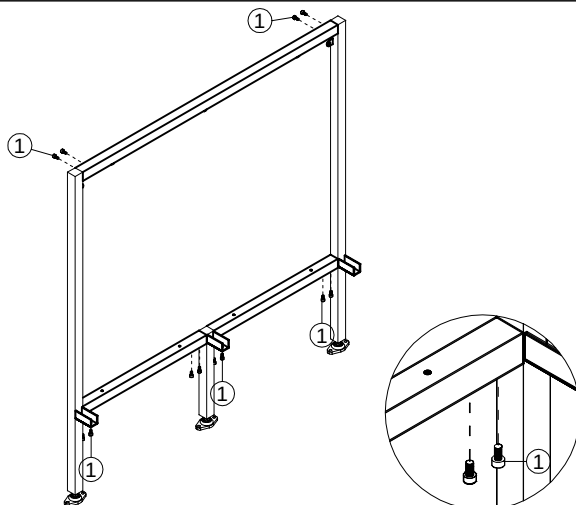


STEP4

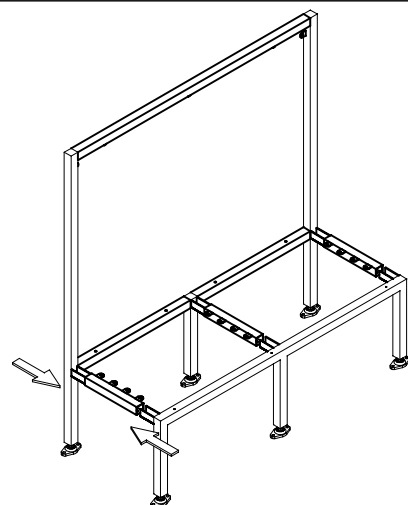

IMPORTANT NOTE:


- Place all laminated parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Don't tighten all screws/bolts until all completely assembled.
- Keep all hardware parts out of reach of children
- Do not drill holes for Dynabolts through flooring with membrane for waterproofing. Bolting of stands to floor to be done by others (Furnx installers do not bolt locker seats &/or stands to floor)




Assembly Instructions

MODEL NO:OHBR15


STEP5

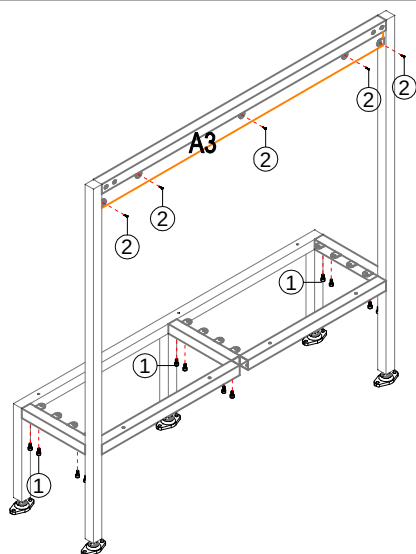


STEP6

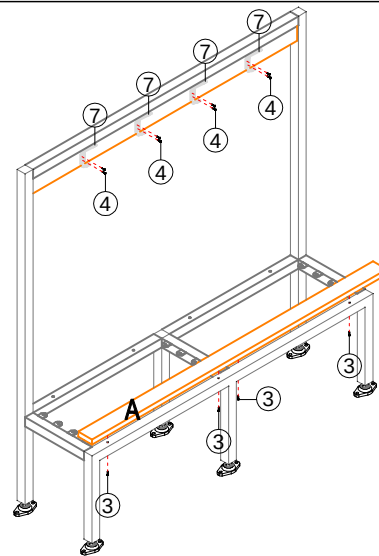



STEP7

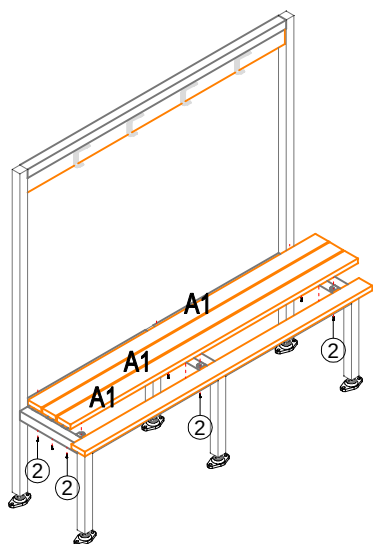

STEP8

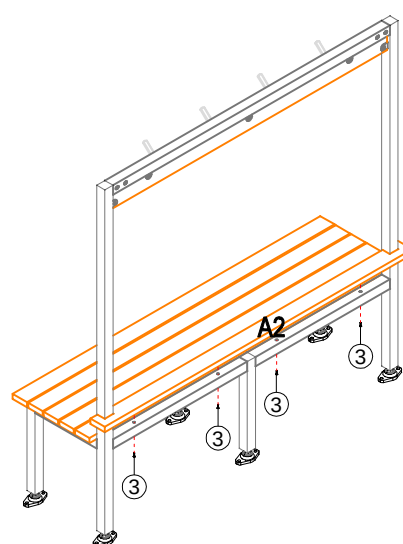

STEP9

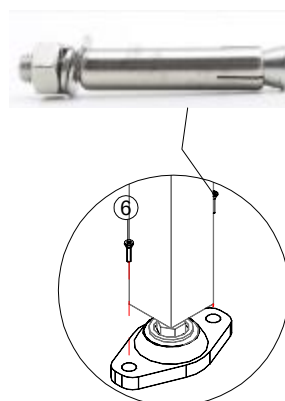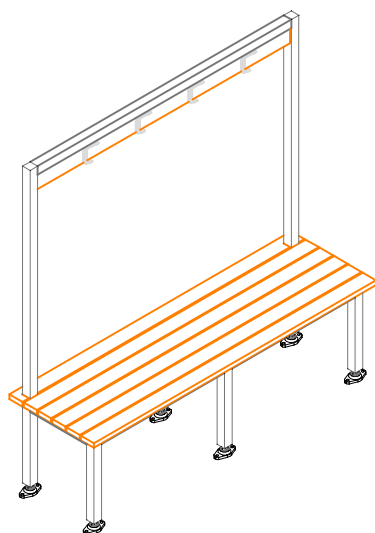

IMPORTANT NOTE:

- Place all laminated parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Don't tighten all screws/bolts until all completely assembled.
- Keep all hardware parts out of reach of children
- Do not drill holes for Dynabolts through flooring with membrane for waterproofing. Bolting of stands to floor to be done by others (Furnx installers do not bolt locker seats &/or stands to floor)

