





Assembly Instructions

MODEL NO: STF5043 STF5058


rapidline

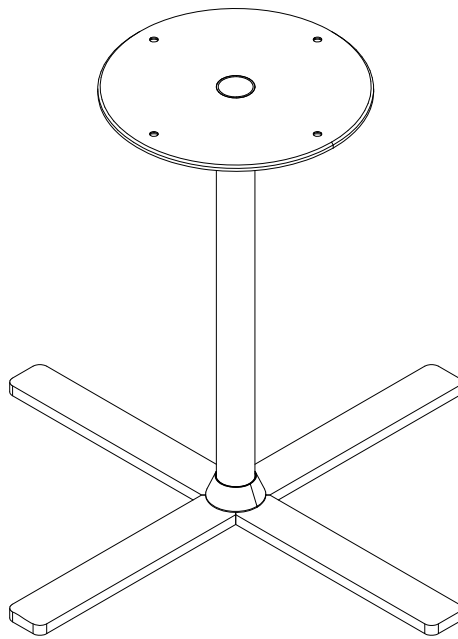


A

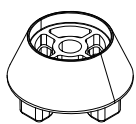Bolt Screw	8×40	
		1
	1PCS	
Conical aluminum parts		
		2
	1PCS	
Allen Wrench	M5	
		3
	1PCS	
Wood Screw	4×20	
		4
	4PCS	

STEP1

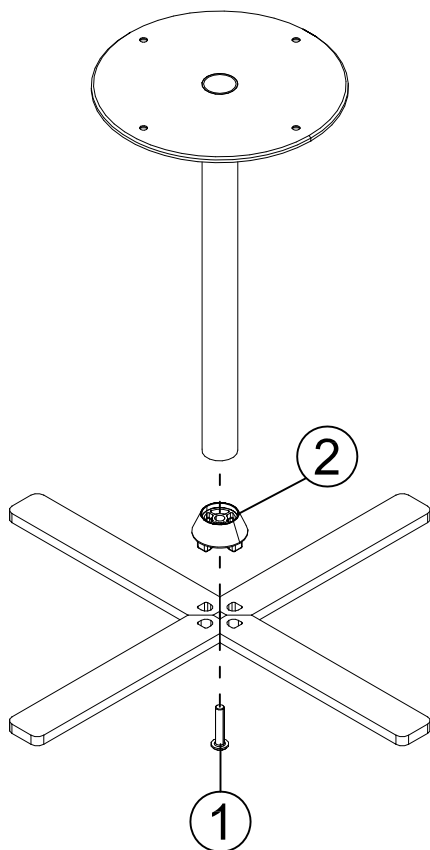

STEP2

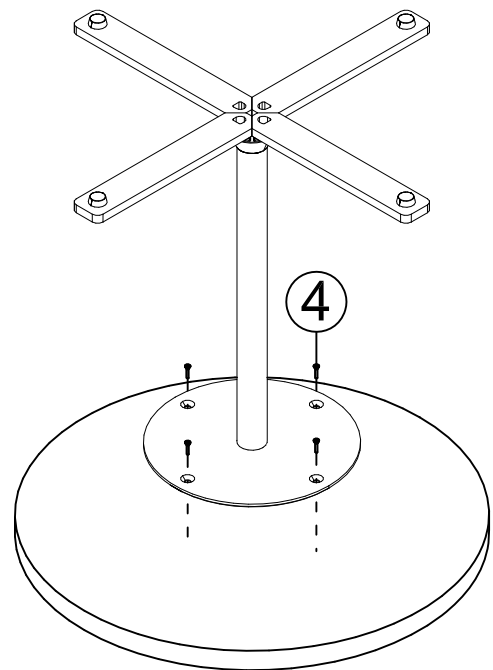

IMPORTANT NOTE:

- Place all laminated parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Don't tighten all screws/bolts until all completely assembled.
- Keep all hardware parts out of reach of children

